

## MOSAICO Round

*The tools to perfect red wines*

### CHARACTERISTICS

Fining and increasing wine stability, while preserving aromas and improving structure is possible with the Mosaico range, obtained with miniTubes™ technology.

They are characterized by:

- ease of preparation and dispersion;
- no animal and plant proteins;
- no allergens.

### APPLICATIONS


**Mosaico Round** makes a brilliant red colour, increases filtration capacity, fixes oxidative colour defects, covers tannic astringency and gives mouth volume. The associations between the different components of Mosaico Round give several results; the yeast derivatives are active on the tannic profile and make the wine smoother and more balanced. The chitin derivatives guarantee the elimination of fractions which are sensitive to oxidative degradation and finally the chitosan reduces contamination risks linked with *Brettanomyces* and the consequent appearance of phenol off-flavours.

### DOSIS and INSTRUCTIONS FOR USE

10 to 30g/hl. Pour the product in water (1:10) and wait 30 minutes while the product dissolves and swells. Mix and add to the volume to be treated.

### PACKAGING

2 kg and 10 kg bags.

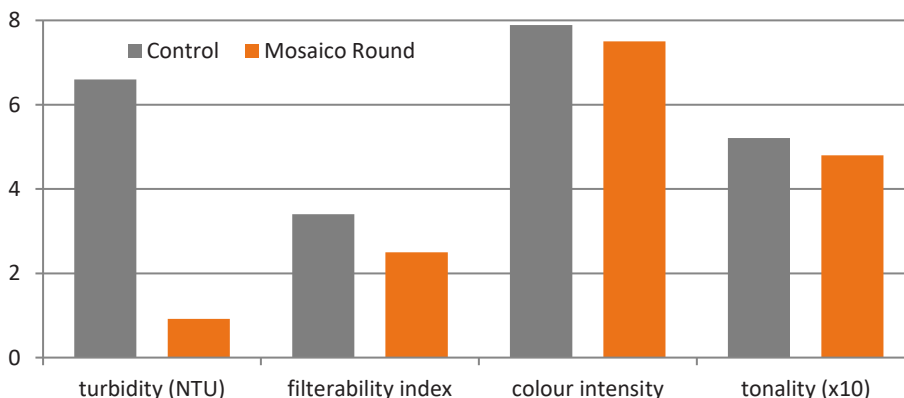

*Analytic profile obtained in a red wine treated with Mosaico Round (30 g/hl).*